

SONIQ

Instruction Manual



E55UV80A

 
 
 
 
 
 
CONTENTS

CAUTION	2
ACCESSORY	4
STAND ASSEMBLY	5
CONTROL BUTTON	6
TERMINAL	7
REMOTE CONTROLLER	8
MENU OPERATION	10
MAIN LAUNCHER	14
SPECIFICATIONS	15
SIMPLE TROUBLESHOOTING	16

CAUTION





1. **Read Instructions** - All the safety and operating instructions should be read before the appliance is operated.
2. **Retain Instructions** - The safety and operating instructions should be retained for future reference.
3. **Heed Warnings** - All warnings on the appliance and in the operating instructions should be adhered to.
4. **Follow Instructions** - All operating instructions should be followed.
5. **Battery** - Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
6. **Earthing Connection** - The apparatus shall be connected to a MAINS socket outlet with a protective earthing connection.
7. **Water and Moisture** - The appliance should not be used near water.
8. **Cart and Stands** - The appliance should only be used with a cart or stand that is recommended by the manufacturer.
9. **Wall or Ceiling Mounting** - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
10. **Ventilation** - The appliance should be well situated so that its location or position does not interfere with its proper ventilation.
11. **Heat** - This appliance should be placed away from heat sources such as radiators, heat registers and stoves.
12. **Power Sources** - The appliance should only be connected to a power supply as described in the operating instructions or as marked on the appliance.
13. **Grounding or Polarization** - Precautions should be taken.
14. **Power Cord Protection** - Power supply cord should be located so that it is not likely to be walked on, or pinched by items placed upon it.
15. **Cleaning** - The appliance should be cleaned only as recommended by the manufacturer.
16. **Power Lines** - An outdoor antenna should be located away from power lines.
17. **Outdoor Antenna Grounding** - If an outside antenna is connected to the receiver, the antenna system must be grounded so as to provide against voltages and built-up static charges.
18. **Non-use Periods** - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
19. **Objects and Liquids** - Care should be taken so that objects do not fall, and liquids are not spilled into the enclosure through openings.
20. **Conditions Requiring Service** - The appliance should be serviced by qualified service personnel when:
 - The power-supply cord or the plug has been damaged.
 - Objects have fallen on or liquid has been spilled into the appliance.
 - The appliance has been exposed to rain.
 - The appliance does not appear to operate normally or exhibits a marked change in performance.
21. This appliance should not be exposed to water and no objects filled with liquids such as a vase should be placed on the unit. Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

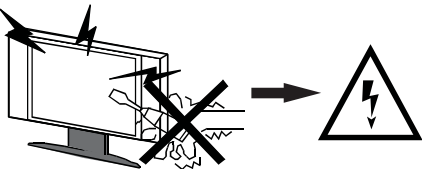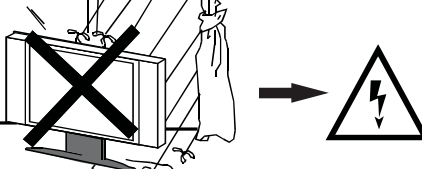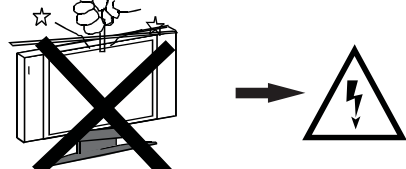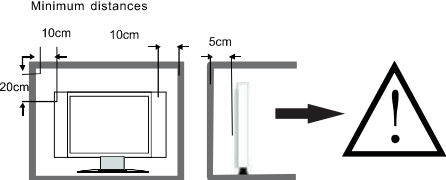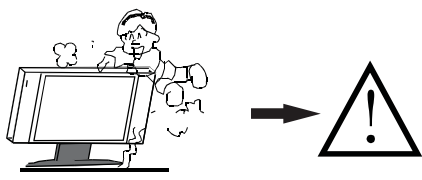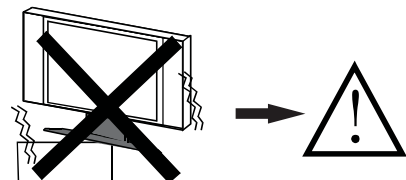 <p>Warning</p> <p>High voltages are used in the operation of this product. Do not remove the back cover of the cabinet. Refer servicing to qualified service personnel.</p>	 <p>Warning</p> <p>To prevent fire or electrical shock hazard, do not expose the main unit to rain or moisture.</p>	 <p>Warning</p> <p>Do not insert foreign objects into the television's slots or openings. Never spill any kind of liquid on the television receiver.</p>
 <p>Caution</p> <p>If the television is placed into a confined space, ensure that the minimum distances are observed as shown. Heat build up can reduce the service life of your television, and can also be dangerous.</p>	 <p>Caution</p> <p>Never stand on, lean on, push or apply force to the product or its stand. You should pay special attention to children.</p>	 <p>Caution</p> <p>Do not place the main unit on an unstable cart stand, shelf or table. Serious injury to an individual, and damage to the television, may result should it fall.</p>

CAUTION

  Best Practice Guide For Furniture And Television Tip-over Prevention

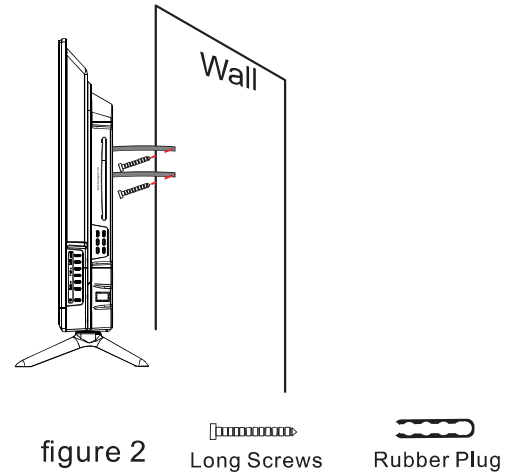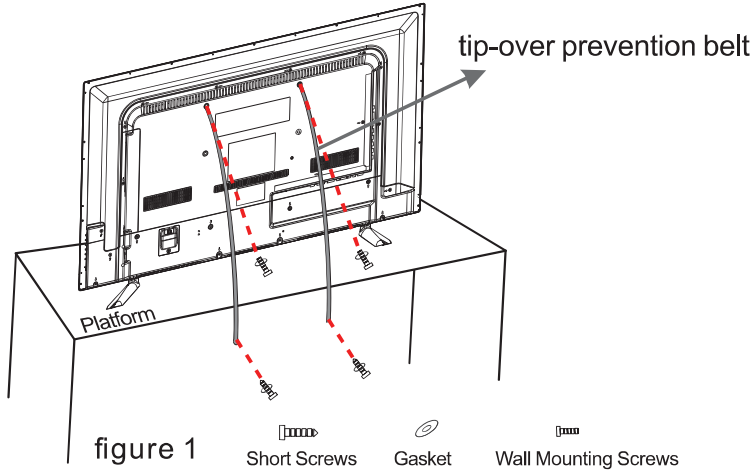

- Put the TV on the platform, fix one end of the tip-over prevention belt in the TV wall mounting hole with screw. Then fix the other end of the tip-over prevention belt on the platform or other suitable surface with screw. (Choose the suitable screws according to the TV size and model to fix the screw in the TV wall mount hole).
- The wall anchor should be fixed on the wall or other surface permanently, screw fixed in the wall must be put into the rubber plug to avoid breaking the TV and cause server personal injury. (figure 2).
Attention: Check whether the tip-over prevention belt is fixed firmly after installation to avoid accident occurring. The screws fixed in the platform or wall are included in the accessory bag.

Exemptions

- SONIQ is not liable for any damage caused by fires, natural disaster (such as thunderstorms, earthquake, etc.), acts by the third parties, accidents, owner's misuse or use in other improper conditions.
- SONIQ is not liable for incidental damages (such as profit loss or interruption in business, modification or erasure of record data, etc.) caused by use or inability to use of product.
- SONIQ is not liable for any damage caused by neglect of the instructions described in the owner's manual.
- SONIQ is not liable for any damage caused by misuse or malfunction through simultaneous use of this product and the connected equipment.

 
Introduction

Thank you for purchasing the unit. Your unit will bring you years of high-quality viewing enjoyment. The television is easy to operate and provides exceptionally high quality image. The manual will explain the operation of the unit, including its functions, features and other important features. Before installing or operating your unit, please take the time to thoroughly read this manual, particularly the sections on safety.


ACCESSORY

Note :

There are these accessories in the carton, the style will be different according to the product model.




Main Unit

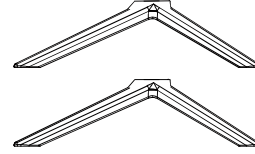 

Stand



 Remote Control
AAA Batteries(x2)

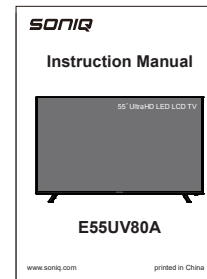

Instruction Manual



Screws: 6PCS Ø4-BM



Warranty Card



 
Quick installation manual

STAND ASSEMBLY

1. Please disconnect all the cable connections before installation.
2. Lay the TV face down on a flat surface, on a blanket or towel to avoid damaging the screen.
3. Please keep the TV in a horizontal position and fix the standing base with screws.



Note:

- Only use matching screws provided by manufacturer in the accessory bag to install the stand of TV unit, in order to avoid damaging the TV unit.

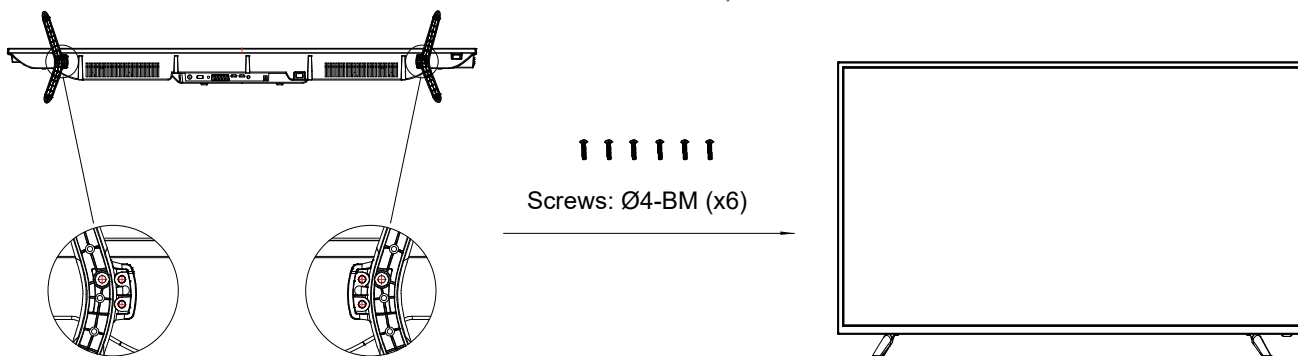

Wall Mounting Instruction:

 
 
This TV is equipped with mounting holes of 200 x 200mm. If the thickness of the wall mount is 2mm, 4PCS of type M6 x 10mm screws are required (the length of the screws fixed in the interior of the TV should not be longer than 12mm). Recommend to use SONIQ wall mount and install by professional people (do not operate while the TV is on).

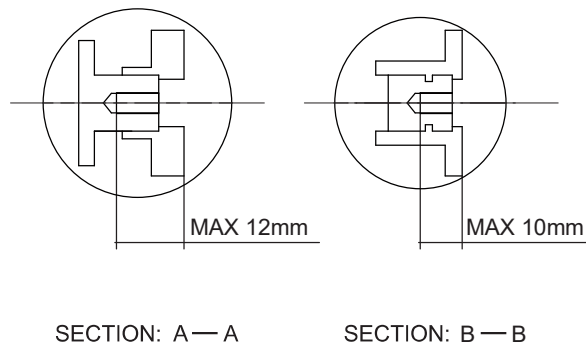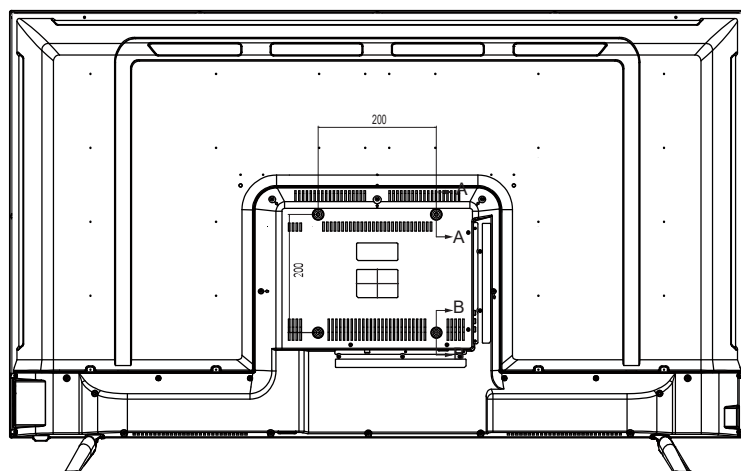

CONTROL BUTTON

Power On the Unit

  Connect the Power Cord to the Power Outlet. Press the POWER Button on the Remote Control or STANDBY Button on the unit to turn on the TV.

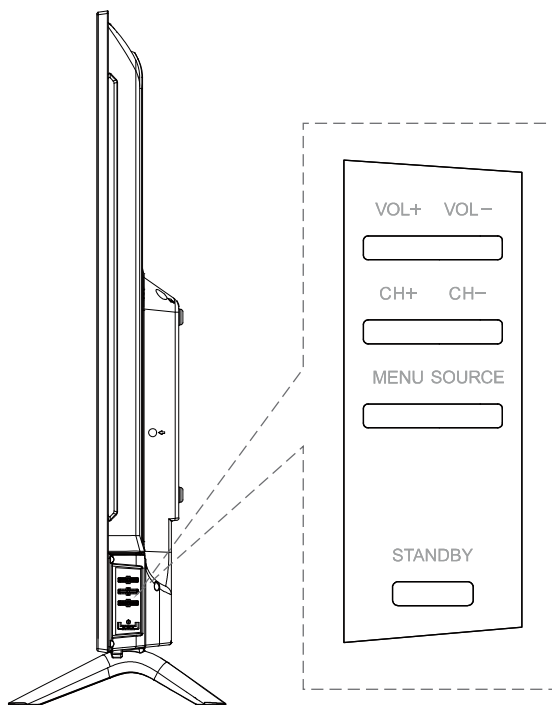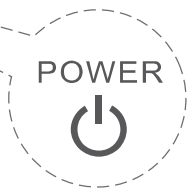

Remote Control


1	-/+	VOL +/-	Press VOL- to decrease volume, or VOL+ to increase. At the OSD menu, press these buttons to move the selection focus left and right to change settings.
2	∨/∧	CH +/-	Press these buttons to sequentially select channels. When the OSD menu is on, press these buttons to move the selection focus up or down to change settings.
3	📖	MENU	Press this button to display the OSD menu. When the OSD menu is on, press this button to exit the menu.
4	📡	SOURCE	Press to display all available input signal sources. Press to cycle through various sources.
5	🔌	STANDBY	Press this button to turn the unit on when it is in standby mode. Press this button once more to put it to standby mode.

Note:

Please use the above instructions according to the actual keys showed on TV.

TERMINAL

 The LED TV has many multimedia functions. It can be connected to many types of equipment. The following paragraph shows how to connect to other Audio and Video devices.

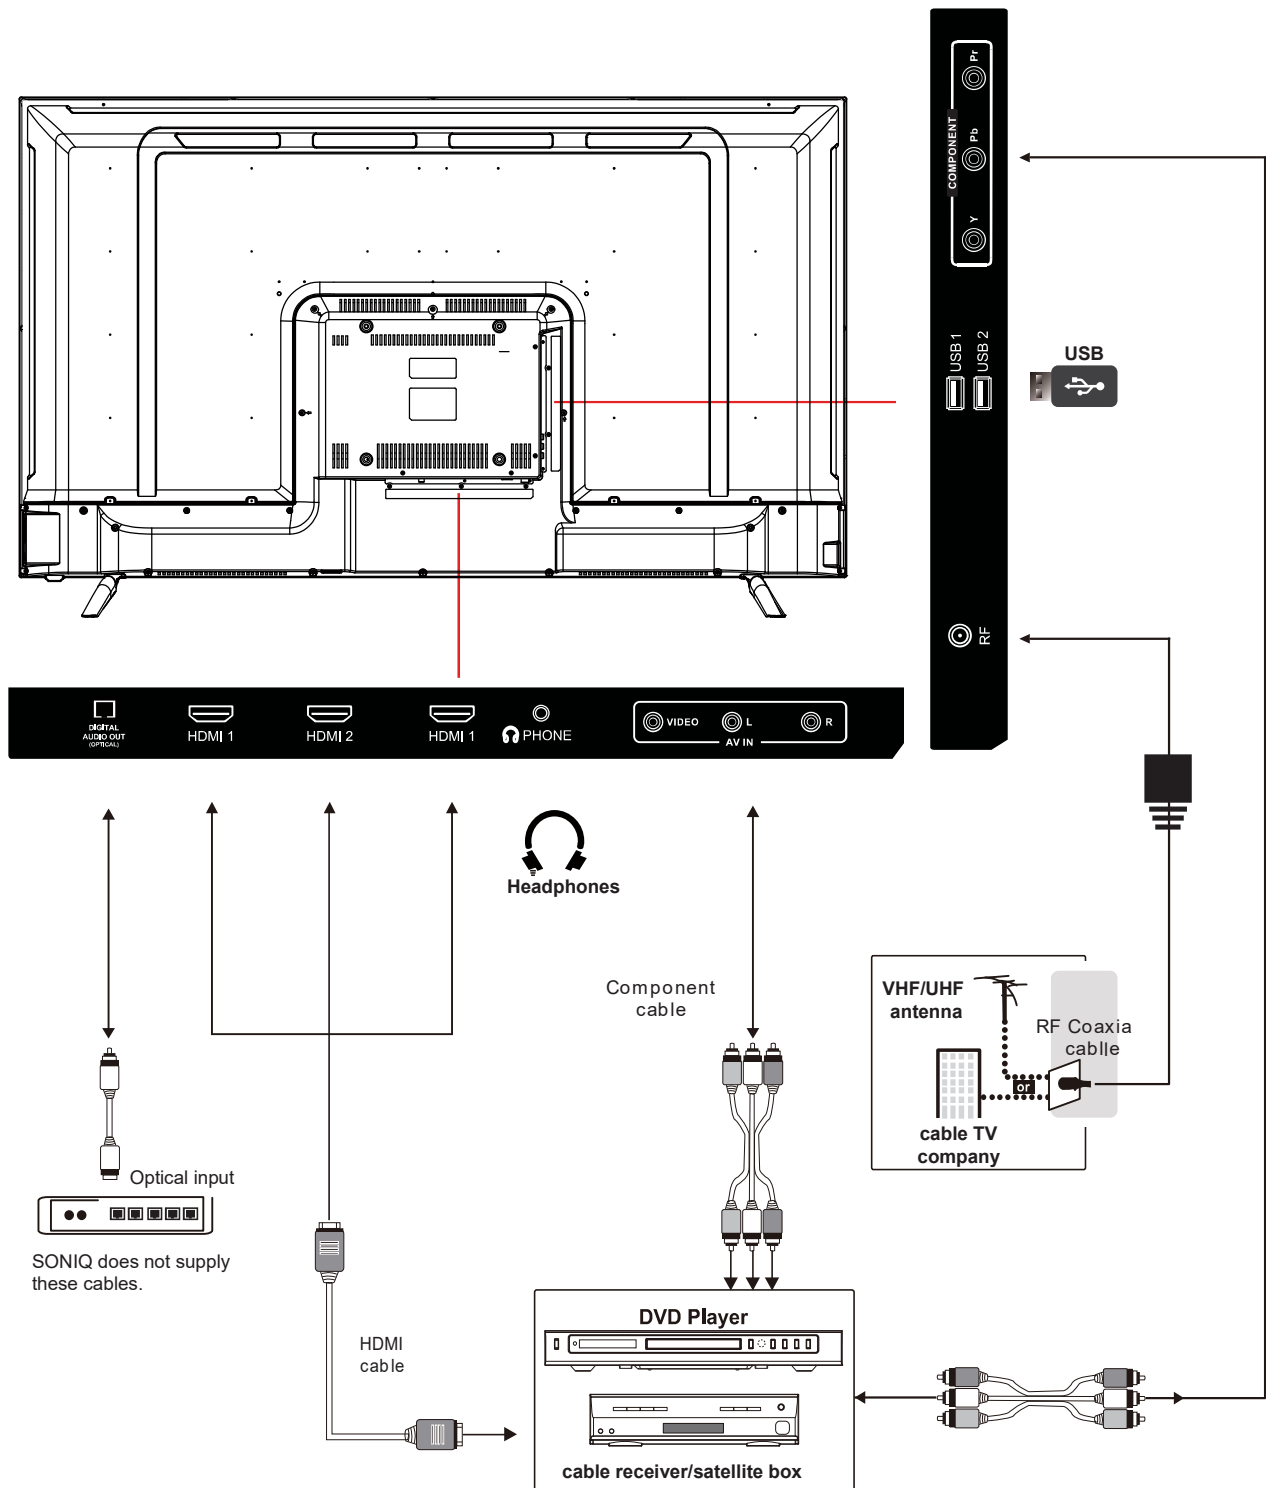

REMOTE CONTROLLER

The remote controller cannot be used unless it is within the receivable range. Before you use the remote control, please make sure there's no obstacle between the remote control and the receiver.

Power button
Toggles the unit between standby and on.

Numerical buttons
Press 0-9 to select a TV channel directly when watching TV. The channel changes after 2 seconds or press "OK" button to change immediately.

Return button
Press to return to previous channel.

FAV button
In TV mode, press FAV button to display your favorite programs.

SLEEP button
Press to activate sleep timer.

PAUSE button
Press to pause the current picture, press again to resume.

ASPECT button
Press to change the aspect ratio of the TV display.

MENU button
Press to display the main menu.

SOURCE button
Press to display the Source menu.

EXIT button
Exit most menu to default status directly. Press to quit all menu.

EPG button
Open or close EPG menu.

Navigation keys (▲/▼/◀/▶/OK)
Allows you to navigate the on screen menus and adjust the system settings to your preference. Press OK in DTV mode to display channel list.

REC button
Press to record program to memory storage.

REPEAT
In media source, press to repeat 1 / All or off.

TSR
Press to delay the process of program broadcasting. Has the function of timeshift under DTV mode.

T/R button
In DTV mode, press to switch between radio and DTV channels.

A-B button
Enables you to repeat a selected section during Media video playback or DTV recording file playback.

GOTO button
Set play time in MEDIA mode.

MUTE button
Press to mute the sound. Press again or press VOL+/- to resume.

P.MODE button
Press to select preset picture mode.

S.MODE button
Press to select preset sound mode.

SUBTITLE button
In DTV mode, press to change subtitle on / off. Has related functions under MEDIA mode.

I-II / AUDIO button
Press to select sound output mode.

INFO button
Press to display the information of current system programme.

VOL+/-
Press to increase / decrease the sound level.

CH / V
Selects a programme in DTV / ATV mode.

PVR.L
Press to display the recorded program list.

CANCEL button
Only available in interactive application, TEXT menu and Music source.

TEXT button
On / Off the teletext.

▶II button
Press to playback or pause the program.

D / A button
Switch directly between ATV and DTV.

REVEAL
Display hidden Text characters.

◀◀ button
Press to fast reverse playback.

SUB. PAGE
Prompt the user to enter a subcode for the Text page.

▶▶ button
Press to fast forward playback.

HOLD button
Stop refurbish Text current page.

■ button
Press to stop media playback. Under DTV mode, press it to stop program recording.

INDEX button
Teletext index page.

◀◀◀ button
Press to return to previous chapter or track.

TXT. Size
Toggles the text size display between half top page, half bottom page and normal.

▶▶▶ button
Press to skip to next chapter or track.

► **Note:**
USB/SD/3D/DVD/TITLE/PBC/SETUP/D.DIS/▶/▲ are invalid.

MENU OPERATION

- Press [SOURCE] button to display the input source list.
- Press ▼/▲ button to select the input source you want.
- Press OK button to enter the selected source.



Channel Selection

- Press the **CH[^]/CH^v** buttons on the main unit or on the remote control repeatedly to select the channel.
- Press the **0-9** buttons on the remote control to select the channel directly.
- Press the **VOL+/-** buttons on the main unit or on the remote control to adjust the volume.
- If you wish to switch the sound off, press the **MUTE** button again or the **VOL+** button to resume the sound.

Menu Operation

 
Before using the TV follow the steps below to learn how to navigate the menu in order to select and adjust different functions. The access step may differ depending on the selected menu.

1. Press MENU to display the main menu.
2. Press ◀/▶ to select a menu. The selected menu page displays.
3. Press ▼/▲ to set your selection.
4. Press ▼/▲ to choose an item on the menu page and press ▶ or OK to confirm.
5. Press ◀/▶ to adjust an item value or choose options.
6. Press MENU to return to the menu, To exit the on-screen menu completely, press EXIT.

MENU OPERATION


CHANNEL

This menu only functions in TV mode.

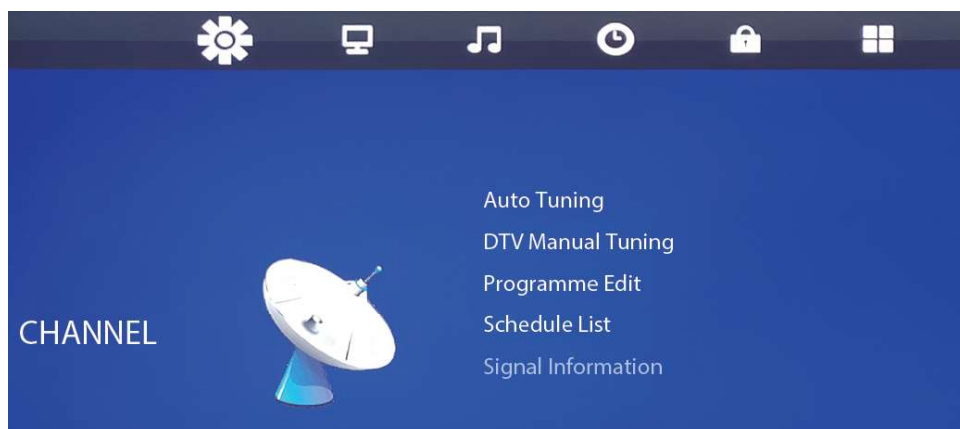

- **Auto Tuning:** Press the ENTER button to start Auto tuning which automatically scan and store all available programmes.
- **ATV Manual Tuning:** Manual store for ATV channels.
- **DTV Manual Tuning:** Manual store for DTV channels.
- **Programme Edit:** Press ok to enter and edit the channel according to the color suggestion function.

 
PICTURE

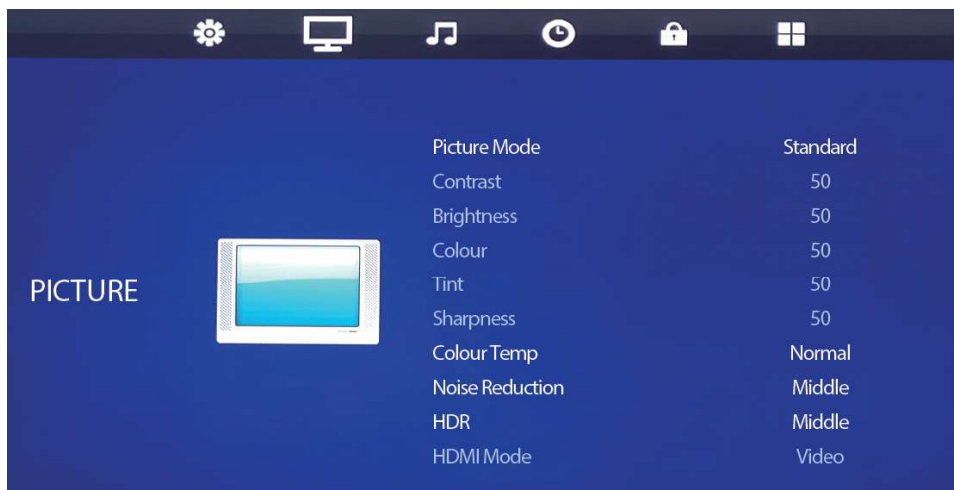

- **PICTURE Mode:** Choose the picture menu with left and right keys. Then the up and down arrows can be used to select this item. The picture mode can be switched to standard/dynamic/mild/user through right key.
- **Contrast/Brightness/Color/Tint/Sharpness:** Everyone looks at the color feeling is different, here can debug, After pressing OK, debug by pressing left and right keys.
- **Color Temperature:** Select the color temperature that you feel comfortable.
- **Noise Reduction:** Reduces the picture noise in a weak broadcast signal.
- **HDMI Mode:** Available in the HDMI input source.


MENU OPERATION

 SOUND

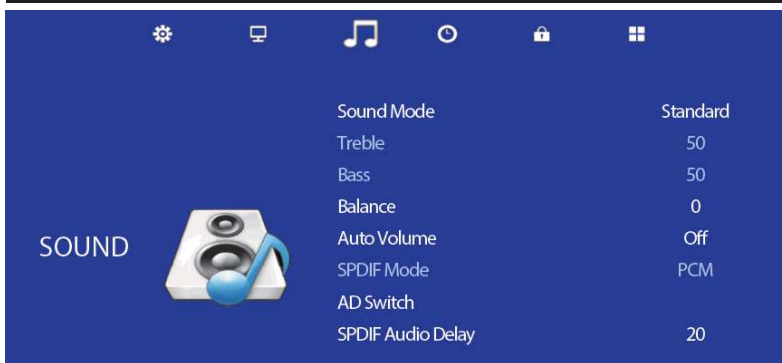

- **Sound Mode:** You can select a sound mode to suit your personal preferences. five-stage equalization setting can be adjusted when the sound mode is set to User.
- **Treble:** Adjust the high frequency sounds.
- **Bass:** Adjust the low frequency sounds.
- **Balance:** Adjust the level of sound coming from the left and right speakers.
- **Auto Volume:** Auto Volume automatically remains on the same level of volume, if you change programmes. Because each broadcasting station has its own signal conditions, volume adjustment may be needed every time when the channel is changed. This feature allows users to enjoy stable volume levels by making automatic adjustments for each program.
- **SPDIF Mode:** Select to Off / PCM / Auto the SPDIF Mode.
- **ADS Switch:** The function is for the ones who has bad eyesight. Some scenes in some code.

 TIME

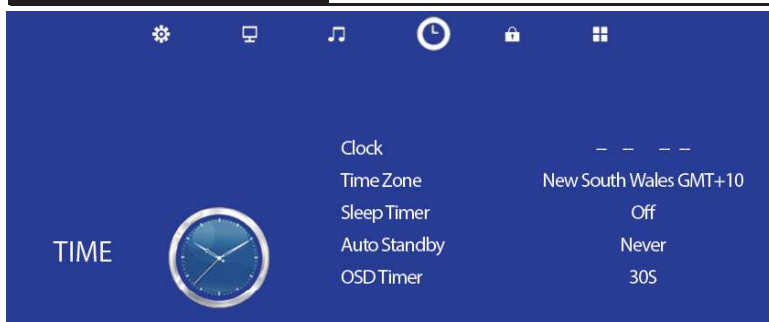

- **Clock:** Edit the time of the TV.
- **Sleep Timer:** Sleep Timer switches the TV to standby after a defined period of time. To cancel the Sleep Timer, set to "Off".
- **Auto Sleep:** Select the time in hours (off, 3H, 4H, 5H) that you want the TV to remain on after your last operation, Cancel by setting it to Off.
- **OSD Timer:** Select the time in seconds (5s, 10s, 30s,) that you want the On-Screen Menu remain display after your last operation.

MENU OPERATION

LOCK

 


Press MENU button to display the main menu.

Press ◀ / ▶ button to select LOCK in the main menu, it will highlight the first option.

Press OK button and input password (the default password is 0000) to enter the sub-title , and press ◀ / ▶ to adjust

OPTLON

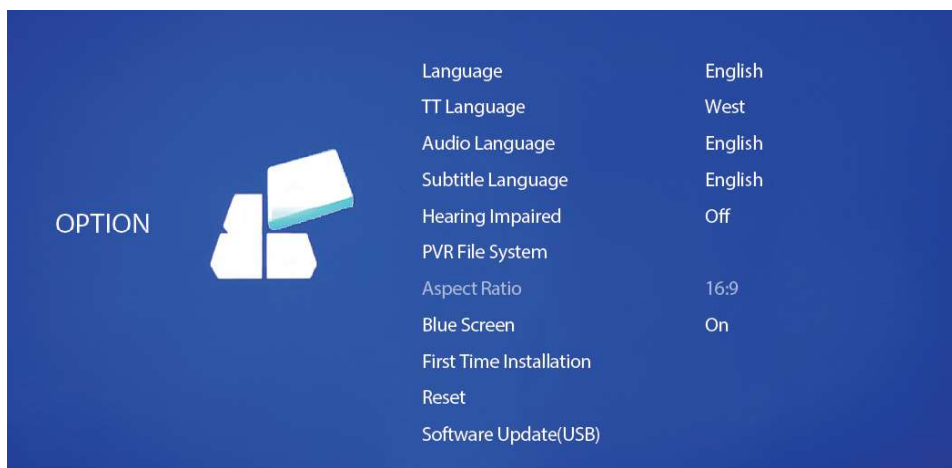

- **OSD Language:** Select your preferred On Screen Display language.
- **TT Language :** Press ▼ / ▲ to select TT Languages, then press the OK button to enter sub-menu.
- **Scale:** You can select the picture size which best corresponds to your viewing requirements.
- **Blue Screen:** Select On / Off the Blue Screen.
- **Key Lock:** Lock or unlock the key panel buttons on the TV.
- **Reset:** Recall the default setting.
- **Software Update(USB):** Press ▼ / ▲ button to Software Update then press ▼ / ▲ button to select On or Off.

MAIN LAUNCHER



The USB storage devices should be inserted into the terminal.

Select the Media(or USB) source and view the multimedia.

Select the multimedia and press the [OK] button to enter.

In the play interface, according to the menu display operation (If the menu has disappeared, you can press the [OK] button).

SPECIFICATIONS

Power Source	~220-240V AC , 50/60Hz	
Power Consumption	150W	
Video Format Supporting	HDMI	480i, 480p, 576i,576p, 720p, 1080i, 1080p, 4K2K
Digital TV	Programme Coverage	VHF (42MHz ~ 230MHz) UHF (474MHz ~ 862MHz)
	Video System	MPEG-2MP@ML
	Audio System	MPEG1, layer1
Panel Spec	Display Area HxV(mm)	1209.6(H) x 680.4(V)
	Panel Native Resolution	3840x 2160pixels
	Brightness	250cd/m ²
	Contrast Ratio	5000 :1 Typ
Input/Output	RF IN	RF IN x 1
	HDMI	HDMI x 3
	AV IN	AV IN x 1
	Digital Audio Out (Optical)	Digital Audio Optical Out x1
	USB	USB x 2
	Earphone out	Earphone x 1
	YPbPr	YPbPr x 1
Audio Power	8W + 8W	
Unit Dimension	1244mm(L) x 728mm(W) x 245(H)mm	

Supported PC Input Signal

Your unit can use as PC monitor, it supports below RGB-PC, HDMI mode INPUT.

RGB-PC, HDMI mode INPUT SPEC				
VGA / HDMI Input				
INPUT FORMAT	Resolution	Horizontal frequency (KHz)	Vertical frequency (HZ)	Standard
	640x480	31.5	60	VGA
	640x480	37.86	72.809	VESA
	640x480	37.5	75	VESA
	720x400	31.5	70	VGA-T
	800x600	37.9	60	VESA Guidelines
	800x600	48.077	72.19	VESA
	800x600	46.9	75	VESA
	832x624	49.7	75	Mac
	1024x768	48.4	60	VESA Guidelines
	1024x768	60	75	VESA
	1152x870	68.68	75	Mac
	1280x800	47.8	59.8	—
	1280x960	60.0	60	VESA
	1360x768	47.7	60	VESA
	1366x768	47.712	59.79	VESA
	1440x900	55.9	59.9	VESA
	1680x1050	65.3	60	—
	1920x1080(RGB-PC)	66.587	59.93	VESA
	1920x1080(HDMI-PC)	67.5	60	VESA
	3840x2160(HDMI-PC)	67.5	30	—

SIMPLE TROUBLESHOOTING

If the display fails or the performance dramatically changes, check the display in accordance with the following instructions. Remember to check the peripherals to pinpoint the source of the failure. If the display still fails to perform as expected, contact the dealer for assistance.

Symptom	DEALING METHOD
No Power	Check the power connection. Pull the plug out, wait for 60 seconds, then reconnect the power and turn on the set.
No Sound	Increase the volume. Check if the set is on the mute state or not. Check the voice setting condition. Check the voice mode setting condition.
Remote not responding	Check the effect of the batteries. If necessary, replace the batteries or clean the remote control sensor window. The distance between the set and the remote control should be less than 6 meters.
Abnormal Color	Check the antenna connection.
TV set needs to be cleaned	Please pull the plug out when cleaning the screen. Use a soft, clean cloth to wipe it off. If needed to clean further, please use dry cloth, do not use naphtha or other thinners liquids.
System Error (For Smart TV only)	<ul style="list-style-type: none">● Retry current operation.● Enter the home page, and select "Restore Factory Setting" in the menu of System Setting. Do not cut off power during restore period.● Power off, then restart.



HOTLINE

- AUSTRALIA : www.soniq.com/au/contact-us
- NEW ZEALAND : www.soniq.com/nz/contact-us